 




WDC-903M

Wireless Conference
Discussion System

 


Installation and Operation



WDC-903M

Wireless Conference
Discussion System



Installation and Operation

Contents

01 Safety Operation and Notice P 3

02 System Overview P 5

03 System Performance Feature P 6

04 Conference Unit Basic Functions P 7

05 Packing List P 8

06 Optional Accessories P 9

 A variety of antennas are optional, suitable for various applications P 9

 GF Optional gooseneck microphone P 10

07 Front Panel Function Introduction P 11

08 Rear Panel Function Introduction P 12

09 Microphone Unit Function Introduction P 13

10 Remote Control P 16

11 LoRa Data Communication Converter Function Introduction P 17

12 Setup and Operation P 18

 A. Startup main interface P 18

 B. Pair the microphone unit with the main controller P 18

 C. Main controller setup P 19

13 Microphone Unit Display Overview P 25

14 System Application Connection Diagram P 27

 Dante Application Connection Diagram P 28

 Factors affecting wireless signal transmission in the system P 29

 Installation of wireless transceiver antenna P 29

15 Technical Specification P 30

Model:	GF-901
Microphone Type:	Condenser
Directivity:	Super cardioid
Frequency Response:	100 ~ 15000Hz
S/N:	>55dB/1KHz at 1Pa
Sensitivity:	-43dB/1KHz at 1Pa
Max. Input Sound Level:	110dB SPL/1KHz at 1% T.H.D
Output Impedance:	680Ω
Connector Type:	Integral 3-Pin Balanced XLR type
Dimension (mm):	175
Weight:	Approximately 195 g

Contents

01 Safety Operation and Notice P 3

02 System Overview P 5

03 System Performance Feature P 6

04 Conference Unit Basic Functions P 7

05 Packing List P 8

06 Optional Accessories P 9

 A variety of antennas are optional, suitable for various applications P 9

 GF Optional gooseneck microphone P 10

07 Front Panel Function Introduction P 11

08 Rear Panel Function Introduction P 12

09 Microphone Unit Function Introduction P 13

10 Remote Control P 16

11 LoRa Data Communication Converter Function Introduction P 17

12 Setup and Operation P 18

 A. Startup main interface P 18

 B. Pair the microphone unit with the main controller P 18

 C. Main controller setup P 19

13 Microphone Unit Display Overview P 25

14 System Application Connection Diagram P 27

 Dante Application Connection Diagram P 28

 Factors affecting wireless signal transmission in the system P 29

 Installation of wireless transceiver antenna P 29

15 Technical Specification P 30

Model:	GF-901
Microphone Type:	Condenser
Directivity:	Super cardioid
Frequency Response:	100 ~ 15000Hz
S/N:	>55dB/1KHz at 1Pa
Sensitivity:	-43dB/1KHz at 1Pa
Max. Input Sound Level:	110dB SPL/1KHz at 1% T.H.D
Output Impedance:	680Ω
Connector Type:	Integral 3-Pin Balanced XLR type
Dimension (mm):	175
Weight:	Approximately 195 g

Model:	GF-501
Microphone Type:	Condenser
Directivity:	Cardioid
Frequency Response:	100 ~ 15000Hz
S/N:	>52dB/1KHz at 1Pa
Sensitivity:	-47dB/1KHz at 1Pa
Max. Input Sound Level:	105dB SPL/1KHz at 1% T.H.D
Output Impedance:	680 Ω
Connector Type:	Integral 3-Pin Balanced XLR type
Dimension (mm):	412
Weight:	Approximately 190 g

Thank you for choosing a RELACART professional wireless conference discussion system. You have joined thousands of other satisfied customers. Our years of professional experience of design and manufacturing to ensure our products' quality, performance and reliability.

Model:	GF-501
Microphone Type:	Condenser
Directivity:	Cardioid
Frequency Response:	100 ~ 15000Hz
S/N:	>52dB/1KHz at 1Pa
Sensitivity:	-47dB/1KHz at 1Pa
Max. Input Sound Level:	105dB SPL/1KHz at 1% T.H.D
Output Impedance:	680 Ω
Connector Type:	Integral 3-Pin Balanced XLR type
Dimension (mm):	412
Weight:	Approximately 190 g

Thank you for choosing a RELACART professional wireless conference discussion system. You have joined thousands of other satisfied customers. Our years of professional experience of design and manufacturing to ensure our products' quality, performance and reliability.

01 Safety Operation and Notice

1. Please read instructions for safety operation carefully before installation and operation. Please save your safety operation guide for future reference.
2. Do not scratch, bend, twist, stretch or heat the power cord as this may cause damage to the power cord, resulting in a fire or electric shock.
3. Do not open the device shell, otherwise it may cause electric shock. If you need to repair, maintain or repair, please contact your local agent.
4. Do not touch the power plug with wet hands as this may cause a fire or electric shock.
5. Do not attempt to modify this device. Failure to do so may result in personal injury or product malfunction.
6. Do not use this equipment near water.
7. If the power cord is damaged (such as a broken wire or bare core), obtain replacement parts from your dealer. Continued use of the equipment with a damaged power cord may result in fire or electric shock.
8. To move the device he power, unplug the power cord, and unplug all connecting cables as this may damage the cable, resulting in a fire or electric shock.
9. Before cleaning the device, unplug the power cord and unplug all connecting cables. Please clean it with a dry soft cloth.
10. If the device is not in use for a long time, turn off the power, it is best to unplug the socket.
11. With the power plug and appliance coupler as the disconnecting device, it should be kept easy to operate.
12. For the safe use of the equipment and adequate ventilation, the minimum clearance around the equipment should be maintained at a distance of 10 cm or more.
13. DO NOT cover the Ventilation holes, such as: newspaper/fabric/curtains and other items.
14. Equipment should not be placed on a bare flame source, such as: lit candles.
15. This equipment belongs to Class "I" equipment and should be connected to the grid power output socket with protective ground connection.
16. Battery should not be exposed to sunshine, roasted or other high temperature overheating environment.
17. Do not throw the waste battery, please put in the designated bins.

Model:	GF-301
Microphone Type:	Condenser
Directivity:	Cardioid
Frequency Response:	100 ~ 15000Hz
S/N:	>52dB/1KHz at 1Pa
Sensitivity:	-47dB/1KHz at 1Pa
Max. Input Sound Level:	105dB SPL/1KHz at 1% T.H.D
Output Impedance:	680Ω
Connector Type:	Integral 3-Pin Balanced XLR type
Dimension (mm):	415
Weight:	Approximately 195 g

01 Safety Operation and Notice

1. Please read instructions for safety operation carefully before installation and operation. Please save your safety operation guide for future reference.
2. Do not scratch, bend, twist, stretch or heat the power cord as this may cause damage to the power cord, resulting in a fire or electric shock.
3. Do not open the device shell, otherwise it may cause electric shock. If you need to repair, maintain or repair, please contact your local agent.
4. Do not touch the power plug with wet hands as this may cause a fire or electric shock.
5. Do not attempt to modify this device. Failure to do so may result in personal injury or product malfunction.
6. Do not use this equipment near water.
7. If the power cord is damaged (such as a broken wire or bare core), obtain replacement parts from your dealer. Continued use of the equipment with a damaged power cord may result in fire or electric shock.
8. To move the device he power, unplug the power cord, and unplug all connecting cables as this may damage the cable, resulting in a fire or electric shock.
9. Before cleaning the device, unplug the power cord and unplug all connecting cables. Please clean it with a dry soft cloth.
10. If the device is not in use for a long time, turn off the power, it is best to unplug the socket.
11. With the power plug and appliance coupler as the disconnecting device, it should be kept easy to operate.
12. For the safe use of the equipment and adequate ventilation, the minimum clearance around the equipment should be maintained at a distance of 10 cm or more.
13. DO NOT cover the Ventilation holes, such as: newspaper/fabric/curtains and other items.
14. Equipment should not be placed on a bare flame source, such as: lit candles.
15. This equipment belongs to Class "I" equipment and should be connected to the grid power output socket with protective ground connection.
16. Battery should not be exposed to sunshine, roasted or other high temperature overheating environment.
17. Do not throw the waste battery, please put in the designated bins.

Model:	GF-301
Microphone Type:	Condenser
Directivity:	Cardioid
Frequency Response:	100 ~ 15000Hz
S/N:	>52dB/1KHz at 1Pa
Sensitivity:	-47dB/1KHz at 1Pa
Max. Input Sound Level:	105dB SPL/1KHz at 1% T.H.D
Output Impedance:	680Ω
Connector Type:	Integral 3-Pin Balanced XLR type
Dimension (mm):	415
Weight:	Approximately 195 g

GF Series detachable gooseneck microphone

Model:	GF-101
Microphone Type:	Condenser
Directivity:	Cardioid
Frequency Response:	100 ~ 15000Hz
S/N:	>52dB/1KHz at 1Pa
Sensitivity:	-47dB/1KHz at 1Pa
Max. Input Sound Level:	105dB SPL/1KHz at 1% T.H.D
Output Impedance:	680Ω
Connector Type:	Integral 3-Pin Balanced XLR type
Dimension (mm):	455
Weight:	Approximately 165 g

18. Water protection rating: IPX0.
19. The device can be used normally in tropical/temperate climates.
20. The power plug of the device should be inserted into a grounded socket for use.
21. Do not expose the apparatus to dripping and splashing. Do not put objects filled with liquids, such as vases, on the apparatus.
22. This product is only suitable for safe use at the altitude of 2000m and below.
23. This symbol "⚡" indicates that dangerous voltage constituting a risk of electric shock is present within this unit.
24. The power cord supplied with the device has a grounding pin (the third pin). If the mains power socket you are using does not have a grounding hole, please contact your electrician to replace it with a mains power socket with a grounding system to use the device. Do not try to unplug it. The ground pin of the power cord may cause damage to the safety of people and equipment.
25. Do not lay the power cord where it is easy to be stepped on, squeezed or placed on the objects, and please especially prevent the power cord from falling off from the mains and the equipment socket.
26. Under the following conditions, please unplug the power cord of the equipment and entrust qualified technical personnel to do maintenance work:
 - The power cord or power plug is damaged.
 - The device has been sprayed with liquid, or objects have been transferred into the device.
 - The device has been exposed to water.
27. The product nameplate is pasted at the bottom, and the product name and model can be seen on the nameplate.
28. All Relacart products will be afforded one year free maintenance except for man-made damage, such as:
 - the device is damaged by man-made factors.
 - the device is damaged by improper operation.
 - some components are damaged or loss after the self-disassembly.

GF Series detachable gooseneck microphone

Model:	GF-101
Microphone Type:	Condenser
Directivity:	Cardioid
Frequency Response:	100 ~ 15000Hz
S/N:	>52dB/1KHz at 1Pa
Sensitivity:	-47dB/1KHz at 1Pa
Max. Input Sound Level:	105dB SPL/1KHz at 1% T.H.D
Output Impedance:	680Ω
Connector Type:	Integral 3-Pin Balanced XLR type
Dimension (mm):	455
Weight:	Approximately 165 g

18. Water protection rating: IPX0.
19. The device can be used normally in tropical/temperate climates.
20. The power plug of the device should be inserted into a grounded socket for use.
21. Do not expose the apparatus to dripping and splashing. Do not put objects filled with liquids, such as vases, on the apparatus.
22. This product is only suitable for safe use at the altitude of 2000m and below.
23. This symbol "⚡" indicates that dangerous voltage constituting a risk of electric shock is present within this unit.
24. The power cord supplied with the device has a grounding pin (the third pin). If the mains power socket you are using does not have a grounding hole, please contact your electrician to replace it with a mains power socket with a grounding system to use the device. Do not try to unplug it. The ground pin of the power cord may cause damage to the safety of people and equipment.
25. Do not lay the power cord where it is easy to be stepped on, squeezed or placed on the objects, and please especially prevent the power cord from falling off from the mains and the equipment socket.
26. Under the following conditions, please unplug the power cord of the equipment and entrust qualified technical personnel to do maintenance work:
 - The power cord or power plug is damaged.
 - The device has been sprayed with liquid, or objects have been transferred into the device.
 - The device has been exposed to water.
27. The product nameplate is pasted at the bottom, and the product name and model can be seen on the nameplate.
28. All Relacart products will be afforded one year free maintenance except for man-made damage, such as:
 - the device is damaged by man-made factors.
 - the device is damaged by improper operation.
 - some components are damaged or loss after the self-disassembly.

02 System Overview

Relacart launched a new generation of wireless conference discussion system WDC-903M, with professional appearance design, perfect circuit composition and stable functional characteristics. It can be used with VTS-2000 automatic video tracking system and central control system to achieve functional diversification.

The data instructions of this wireless conference discussion system are transmitted using the LoRa protocol. The audio works in the UHF band. The high-fidelity circuit design can produce high-quality sound effects. The system has anti-interference protection, which can effectively block the influence of wireless devices such as computers, mobile phones and Bluetooth in the environment.

With automatic search function (AFS) , it can automatically search for a free frequency backup and replace the frequency of the interfered working channel automatically. With automatic and manual activation of the microphone unit, the main controller can turn on the microphone unit automatically. In manual mode, you need to turn on the microphone unit manually in manual mode.

Unique and simple installation design, easy and fast, and has no impact on the installation site, especially for the installation or layout of historical museums, ancient buildings and other historical and cultural buildings. Users do not need to worry about causing damage to ancient buildings. No wiring or drilling is required, providing a professional and perfect solution for demanding and complex applications.

This wireless conference discussion system is fully applicable to local government departments, corporate conference rooms, business venues, and international conference centers.

R-20U Directional antenna

Frequency Range:	600MHz ~ 900MHz
Antenna Gain:	7dB
Antenna SWR:	≤2
Input Impedance:	50Ω
Polarization Method:	Vertical
Front-to-back Ratio:	≥25dB
Horizontal Flap Width:	80°
Vertical Flap Width:	60°
Connector Type:	BNC female
Dimension (mm):	180 (W) x 210 (H) x 44 (D)
Weight:	Approximately 300 g

02 System Overview

Relacart launched a new generation of wireless conference discussion system WDC-903M, with professional appearance design, perfect circuit composition and stable functional characteristics. It can be used with VTS-2000 automatic video tracking system and central control system to achieve functional diversification.

The data instructions of this wireless conference discussion system are transmitted using the LoRa protocol. The audio works in the UHF band. The high-fidelity circuit design can produce high-quality sound effects. The system has anti-interference protection, which can effectively block the influence of wireless devices such as computers, mobile phones and Bluetooth in the environment.

With automatic search function (AFS) , it can automatically search for a free frequency backup and replace the frequency of the interfered working channel automatically. With automatic and manual activation of the microphone unit, the main controller can turn on the microphone unit automatically. In manual mode, you need to turn on the microphone unit manually in manual mode.

Unique and simple installation design, easy and fast, and has no impact on the installation site, especially for the installation or layout of historical museums, ancient buildings and other historical and cultural buildings. Users do not need to worry about causing damage to ancient buildings. No wiring or drilling is required, providing a professional and perfect solution for demanding and complex applications.

This wireless conference discussion system is fully applicable to local government departments, corporate conference rooms, business venues, and international conference centers.

R-20U Directional antenna

Frequency Range:	600MHz ~ 900MHz
Antenna Gain:	7dB
Antenna SWR:	≤2
Input Impedance:	50Ω
Polarization Method:	Vertical
Front-to-back Ratio:	≥25dB
Horizontal Flap Width:	80°
Vertical Flap Width:	60°
Connector Type:	BNC female
Dimension (mm):	180 (W) x 210 (H) x 44 (D)
Weight:	Approximately 300 g

03 System Performance Feature

R-22AU Directional antenna

Frequency Range:	450MHz ~ 660MHz, 640MHz ~ 950MHz
Antenna Directivity:	Cardioid
Antenna Polarization:	Line
Antenna Gain:	≥6dB
Antenna SWR:	≤2
Amplifier Gain:	5/13dB
Amplifier Low Noise:	<1.8dB
Amplifier OIP3:	>32dBm
External Power Supply:	BNC, DC 8-12V
Current:	40mA
Connector Type:	BNC female
Dimension (mm):	236 (W) x 245 (H) x 31(D)
Weight:	Approximately 220g

- LoRa protocol 433Mhz wireless control signal, UHF audio transmission technology.
- The system searches for non-interference channels automatically and replaces the interfered channels.
- Control up to 255 wireless discussion units and can speak up to 5 wireless units at the same time.
- The main controller can turn the microphone unit on and off automatically.
- With Dante interface, it can communicate with any Dante-equipped device to transmit audio.
- It has 4 conference modes including "FIFO", "limited time", "request", and "sound activation" to meet different meeting needs.
- The microphone unit can be set to manual or automatic power-on mode.
- When fully charged, it can work continuously for 23 hours (speaking state) or 48 hours (standby state). In standby and hibernation mode (the Auto switch is turned on), it can continue to work for 90 days.
- Bright OLED display with Chinese and English language menu selection, easy operation.
- Strong anti-interference function, which can block the influence of computer equipment, mobile phones and Bluetooth devices effectively in the environment.
- Equipped with an antenna interface, used in conjunction with the antenna system of the Relacart, the transmission signal is particularly strong.
- Multi wireless conference systems can be installed in the same building.
- Suitable for desktop or 19-inch (1U) rack mounting.
- You can easily install a temporary system, neat and clean, without any impact on the installation site.
- Cooperate with VTS-2000 automatic video tracking system to realize the automatic video tracking function of the conference.
- Equipped with RS-232 interface, which can connect various central control equipment.

03 System Performance Feature

R-22AU Directional antenna

Frequency Range:	450MHz ~ 660MHz, 640MHz ~ 950MHz
Antenna Directivity:	Cardioid
Antenna Polarization:	Line
Antenna Gain:	≥6dB
Antenna SWR:	≤2
Amplifier Gain:	5/13dB
Amplifier Low Noise:	<1.8dB
Amplifier OIP3:	>32dBm
External Power Supply:	BNC, DC 8-12V
Current:	40mA
Connector Type:	BNC female
Dimension (mm):	236 (W) x 245 (H) x 31(D)
Weight:	Approximately 220g

- LoRa protocol 433Mhz wireless control signal, UHF audio transmission technology.
- The system searches for non-interference channels automatically and replaces the interfered channels.
- Control up to 255 wireless discussion units and can speak up to 5 wireless units at the same time.
- The main controller can turn the microphone unit on and off automatically.
- With Dante interface, it can communicate with any Dante-equipped device to transmit audio.
- It has 4 conference modes including "FIFO", "limited time", "request", and "sound activation" to meet different meeting needs.
- The microphone unit can be set to manual or automatic power-on mode.
- When fully charged, it can work continuously for 23 hours (speaking state) or 48 hours (standby state). In standby and hibernation mode (the Auto switch is turned on), it can continue to work for 90 days.
- Bright OLED display with Chinese and English language menu selection, easy operation.
- Strong anti-interference function, which can block the influence of computer equipment, mobile phones and Bluetooth devices effectively in the environment.
- Equipped with an antenna interface, used in conjunction with the antenna system of the Relacart, the transmission signal is particularly strong.
- Multi wireless conference systems can be installed in the same building.
- Suitable for desktop or 19-inch (1U) rack mounting.
- You can easily install a temporary system, neat and clean, without any impact on the installation site.
- Cooperate with VTS-2000 automatic video tracking system to realize the automatic video tracking function of the conference.
- Equipped with RS-232 interface, which can connect various central control equipment.

04 Conference Unit Basic Functions

The wireless microphone unit is powered by a detachable lithium battery, which can be charged using the WDC-903 special charging case, or directly using the USB interface of the conference unit.

- The microphone unit can be set to manual or automatic power-on mode.
- When fully charged, it can work continuously for 23 hours (speaking state) or 48 hours (standby state). In standby and hibernation mode (the Auto switch is turned on), it can continue to work for 90 days.
- Bright OLED display which can simultaneously display battery capacity, speaking mode, time limit, etc.
- Strong anti interference of cell phone.
- With working indicator.
- Use high-quality condenser capsule to achieve high-quality sound pickup.
- Wireless conference technology can easily install a temporary system, neat and clean, without any impact on the installation site.

DC-903 LoRa Data communication converter

Frequency Range:	400MHz ~ 450MHz
Gain:	16dBm
RF Input Port:	N female
Data Communication Port:	RJ45
Power Supply:	Data line and power line integrated power supply
Material:	Black anodized aluminum (package)
Dimension (mm):	42 (L) x 42 (W) x 105 (H)
Weight:	Approximately 150 g

R-43W Bar antenna

Frequency Range:	400MHz ~ 950MHz, 2000MHz ~ 2500MHz
Antenna Gain:	9dB
Antenna SWR:	≤2
Input Impedance:	50Ω
Connector Type:	N-type male
Dimension (mm):	36.5 (φ) x 376 (H)
Weight:	Approximately 220 g

04 Conference Unit Basic Functions

The wireless microphone unit is powered by a detachable lithium battery, which can be charged using the WDC-903 special charging case, or directly using the USB interface of the conference unit.

- The microphone unit can be set to manual or automatic power-on mode.
- When fully charged, it can work continuously for 23 hours (speaking state) or 48 hours (standby state). In standby and hibernation mode (the Auto switch is turned on), it can continue to work for 90 days.
- Bright OLED display which can simultaneously display battery capacity, speaking mode, time limit, etc.
- Strong anti interference of cell phone.
- With working indicator.
- Use high-quality condenser capsule to achieve high-quality sound pickup.
- Wireless conference technology can easily install a temporary system, neat and clean, without any impact on the installation site.

DC-903 LoRa Data communication converter

Frequency Range:	400MHz ~ 450MHz
Gain:	16dBm
RF Input Port:	N female
Data Communication Port:	RJ45
Power Supply:	Data line and power line integrated power supply
Material:	Black anodized aluminum (package)
Dimension (mm):	42 (L) x 42 (W) x 105 (H)
Weight:	Approximately 150 g

R-43W Bar antenna


Frequency Range:	400MHz ~ 950MHz, 2000MHz ~ 2500MHz
Antenna Gain:	9dB
Antenna SWR:	≤2
Input Impedance:	50Ω
Connector Type:	N-type male
Dimension (mm):	36.5 (φ) x 376 (H)
Weight:	Approximately 220 g

05 Packing List

WDC-903C/WDC-903D Wireless conference unit microphone

Carrier Frequency Range:	521.25MHz ~ 936.85MHz
Oscillation:	PLL synthesized
Harmonic Radiation:	<45dBm
Bandwidth:	134MHz
Max Deviation Range:	±45KHz
Input socket:	Three-pin XLR male socket
RF Output Power:	30mW
Power Supply:	Li-ion polymer rechargeable battery, 3.7V/2900mA
Current Consumption:	120mA (typical), 60mA (standby mute)
Battery Current/Life:	23 hours (typical), 48 hours (standby mute)
Dimension (mm):	162 (L) x 125 (W) x 54 (H)
Weight:	Approximately 910 g

- ◆ Wireless conference system main controller * 1
- ◆ Remote control * 1
- ◆ Power cable * 1
- ◆ BNC Antenna * 2
- ◆ 1 meter audio cable * 1
- ◆ Rack mount kit (screw) * 1 set
- ◆ Installation and operation * 1

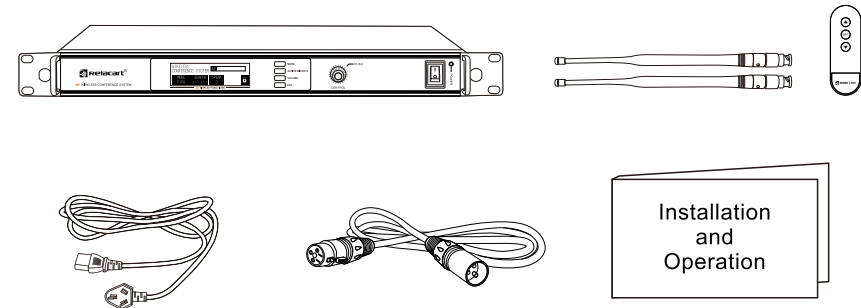


05 Packing List

WDC-903C/WDC-903D Wireless conference unit microphone


Carrier Frequency Range:	521.25MHz ~ 936.85MHz
Oscillation:	PLL synthesized
Harmonic Radiation:	<45dBm
Bandwidth:	134MHz
Max Deviation Range:	±45KHz
Input socket:	Three-pin XLR male socket
RF Output Power:	30mW
Power Supply:	Li-ion polymer rechargeable battery, 3.7V/2900mA
Current Consumption:	120mA (typical), 60mA (standby mute)
Battery Current/Life:	23 hours (typical), 48 hours (standby mute)
Dimension (mm):	162 (L) x 125 (W) x 54 (H)
Weight:	Approximately 910 g

- ◆ Wireless conference system main controller * 1
- ◆ Remote control * 1
- ◆ Power cable * 1
- ◆ BNC Antenna * 2
- ◆ 1 meter audio cable * 1
- ◆ Rack mount kit (screw) * 1 set
- ◆ Installation and operation * 1

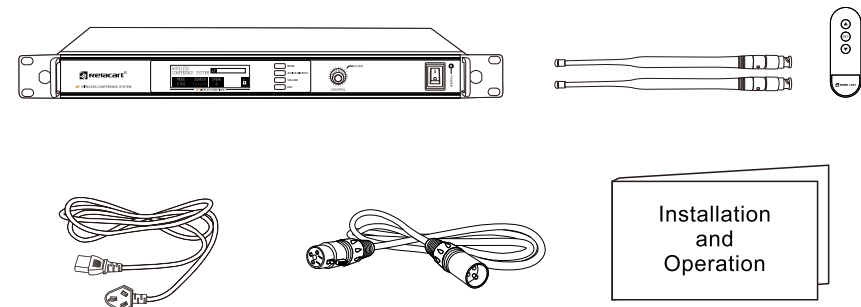

06 Optional Accessories

A variety of antennas are optional, suitable for various applications

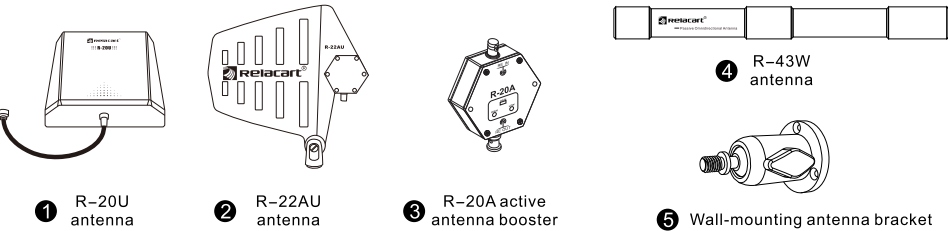

- 1 R-20U panel antenna: beautiful appearance, wall mounting, high gain, wide range of receiving and transmitting signals.
- 2 R-22AU directional antenna: It has the feature of reliable performance, durability, which can provide the best reception effect within the required range. It has gain adjustment, and it can adjust the gain intensity according to the use distance.
- 3 R-20A active antenna booster: Provides gain amplification of the receiving antenna to compensate for signal attenuation on long-distance connection cable and expand the working range and stability of wireless systems.


15 Technical Specification

WDC-903M Wireless conference discussion system host

Main Frame Size:	EIA standard 1U
Receiver Channel:	12 receiving channels
Frequency Stability:	± 0.005%
Carrier Frequency Range:	521.25MHz ~ 936.85MHz
Modulation Mode:	FM
Oscillation:	PLL synthesized
Bandwidth:	32MHz
Max Deviation Range:	±45KHz
Comprehensive S/N:	>100dB
Comprehensive T.H.D:	<0.5%@1KHz
Frequency Response:	50Hz ~ 18KHz
Output:	XLR balanced XLR male, 2 lotus mother seats, Dante network output
Effective working distance:	80 meters (open space)
Power Supply:	AC 100~240V, 50/60Hz
Dimension (mm):	480 (W) x 43 (H) x 350 (D)
Weight:	Approximately 3.2 Kg

06 Optional Accessories

A variety of antennas are optional, suitable for various applications

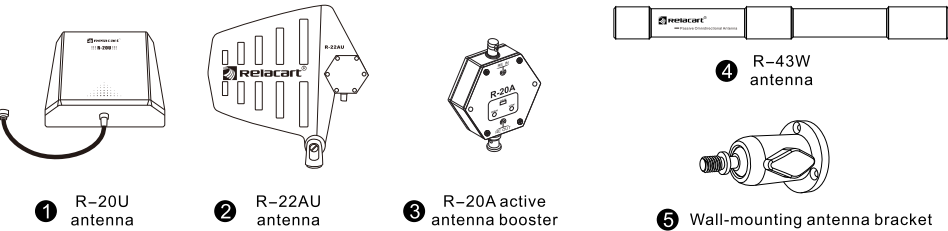

- 1 R-20U panel antenna: beautiful appearance, wall mounting, high gain, wide range of receiving and transmitting signals.
- 2 R-22AU directional antenna: It has the feature of reliable performance, durability, which can provide the best reception effect within the required range. It has gain adjustment, and it can adjust the gain intensity according to the use distance.
- 3 R-20A active antenna booster: Provides gain amplification of the receiving antenna to compensate for signal attenuation on long-distance connection cable and expand the working range and stability of wireless systems.

15 Technical Specification

WDC-903M Wireless conference discussion system host

Main Frame Size:	EIA standard 1U
Receiver Channel:	12 receiving channels
Frequency Stability:	± 0.005%
Carrier Frequency Range:	521.25MHz ~ 936.85MHz
Modulation Mode:	FM
Oscillation:	PLL synthesized
Bandwidth:	32MHz
Max Deviation Range:	±45KHz
Comprehensive S/N:	>100dB
Comprehensive T.H.D:	<0.5%@1KHz
Frequency Response:	50Hz ~ 18KHz
Output:	XLR balanced XLR male, 2 lotus mother seats, Dante network output
Effective working distance:	80 meters (open space)
Power Supply:	AC 100~240V, 50/60Hz
Dimension (mm):	480 (W) x 43 (H) x 350 (D)
Weight:	Approximately 3.2 Kg

Factors affecting wireless signal transmission in the system:

In order to ensure that the digital wireless conference system can work normally, all signal transmission must not be disturbed.

In addition to using sufficient transmitting and receiving antennas, they must be placed in a reasonable position to ensure that. The wireless signal transmission is uniform and consistent with all wireless conference units in the conference venue.

When planning a digital wireless conference system, factors that affect signal uniformity and strength must be considered.


Installation of wireless transceiver antenna:

Wireless transmission is non-directional and will not be affected by visible light. All the transmitting antennas can. For outdoor use, since the transmission is non-directional, the transmitting antenna is installed in the venue where it is used. Do not install it in the control room, because the transmitting power of the transmitting antenna is only 10mW, and the penetration ability is relatively small. The linear stable transmission distance is about 30 meters. All transmitting antennas must be as close as possible to the infinite conference list. When using a directional antenna, the wireless conference unit has the best sensitivity when facing the transmitting and receiving antenna. And transmit. There must be no obstacles in the space.

Transmitting antenna, no metal near the installation location.

- ④ R-43W rod antenna: N-type male XLRS, connected to DC-903 data communication converter, high gain, 360° receiving/transmitting signal, can provide stable signal transmitting/receiving effect for data communication converter.
- ⑤ Wall-mounted antenna bracket: Used for fixing on a wall, the antenna can be adjusted to different angles 360° to better utilize the antenna directivity.

GF Optional gooseneck microphone

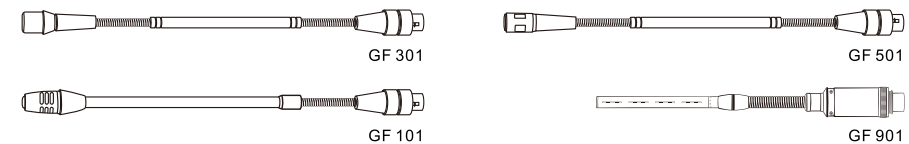

- ① Locked three-pin balanced Cannon female microphone, can firmly lock the conference microphone base to prevent loosening or various failures caused by poor contact.
- ② With LED indicator, you can know the working status of the microphone through the LED indicator.
- ③ RFI shielding technology can suppress external radio frequency interference effectively.
- ④ Different model and lengths are available.

Factors affecting wireless signal transmission in the system:

In order to ensure that the digital wireless conference system can work normally, all signal transmission must not be disturbed.

In addition to using sufficient transmitting and receiving antennas, they must be placed in a reasonable position to ensure that. The wireless signal transmission is uniform and consistent with all wireless conference units in the conference venue.

When planning a digital wireless conference system, factors that affect signal uniformity and strength must be considered.


Installation of wireless transceiver antenna:

Wireless transmission is non-directional and will not be affected by visible light. All the transmitting antennas can. For outdoor use, since the transmission is non-directional, the transmitting antenna is installed in the venue where it is used. Do not install it in the control room, because the transmitting power of the transmitting antenna is only 10mW, and the penetration ability is relatively small. The linear stable transmission distance is about 30 meters. All transmitting antennas must be as close as possible to the infinite conference list. When using a directional antenna, the wireless conference unit has the best sensitivity when facing the transmitting and receiving antenna. And transmit. There must be no obstacles in the space.

Transmitting antenna, no metal near the installation location.


- ④ R-43W rod antenna: N-type male XLRS, connected to DC-903 data communication converter, high gain, 360° receiving/transmitting signal, can provide stable signal transmitting/receiving effect for data communication converter.
- ⑤ Wall-mounted antenna bracket: Used for fixing on a wall, the antenna can be adjusted to different angles 360° to better utilize the antenna directivity.

GF Optional gooseneck microphone

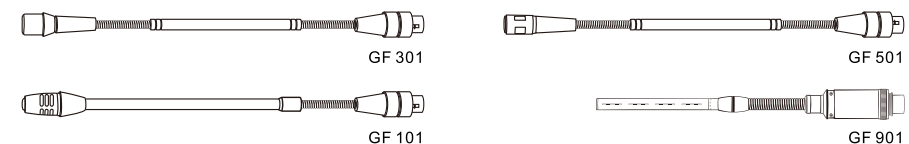

- ① Locked three-pin balanced Cannon female microphone, can firmly lock the conference microphone base to prevent loosening or various failures caused by poor contact.
- ② With LED indicator, you can know the working status of the microphone through the LED indicator.
- ③ RFI shielding technology can suppress external radio frequency interference effectively.
- ④ Different model and lengths are available.


07 Front Panel Function Introduction

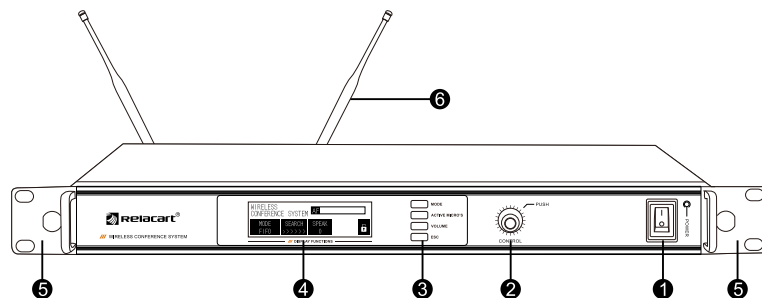

- ① POWER switch (with indicator light).
- ② Function knob(Encoder): Press and hold for 3 seconds to enter the function selection menu, select the menu clockwise/counterclockwise, and press to set the system operation menu.
- ③ Shortcut function buttons:
 - MODE: Short press to enter conference mode selection interface.
 - ACTIVE MICRO'S: Short press to enter the microphone to open the number of speech selection interface.
 - VOLUME: Short press to enter the volume adjustment interface.
 - ESC: Exit key, short press to exit to the previous menu.
- ④ OLED display: Displays set values and parameters.
- ⑤ Rack mount kit: Fixed installation.
- ⑥ 1/2 wavelength BNC antenna: It used to receive radio waves transmitted by the transmitter.


P11

Dante Application Connection Diagram

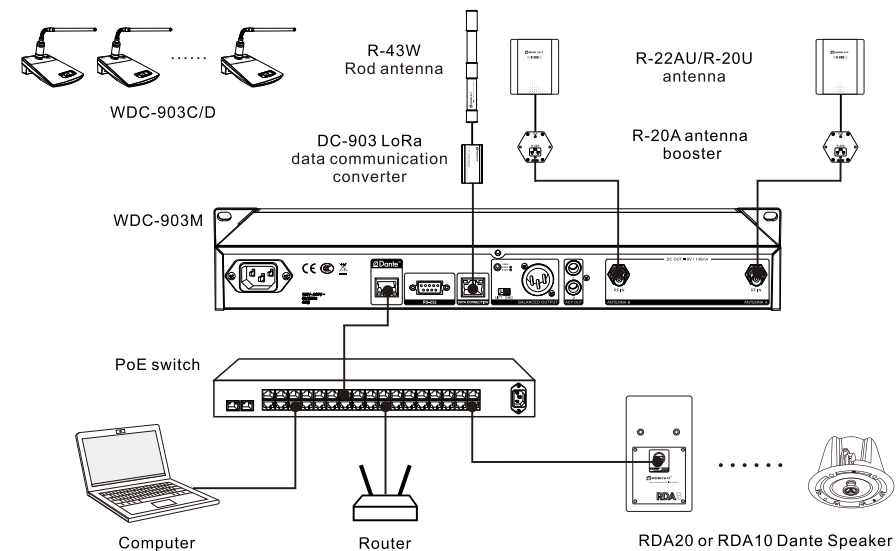

P28


07 Front Panel Function Introduction

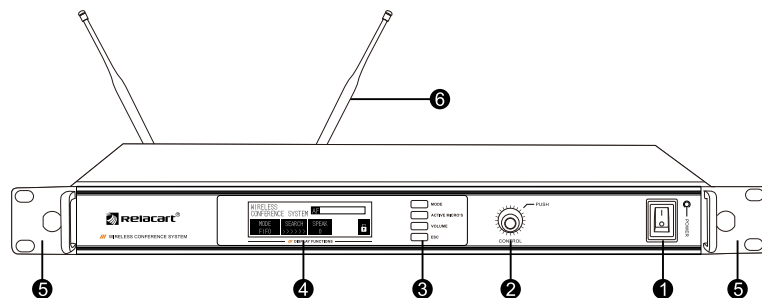

- ① POWER switch (with indicator light).
- ② Function knob(Encoder): Press and hold for 3 seconds to enter the function selection menu, select the menu clockwise/counterclockwise, and press to set the system operation menu.
- ③ Shortcut function buttons:
 - MODE: Short press to enter conference mode selection interface.
 - ACTIVE MICRO'S: Short press to enter the microphone to open the number of speech selection interface.
 - VOLUME: Short press to enter the volume adjustment interface.
 - ESC: Exit key, short press to exit to the previous menu.
- ④ OLED display: Displays set values and parameters.
- ⑤ Rack mount kit: Fixed installation.
- ⑥ 1/2 wavelength BNC antenna: It used to receive radio waves transmitted by the transmitter.


P11

Dante Application Connection Diagram

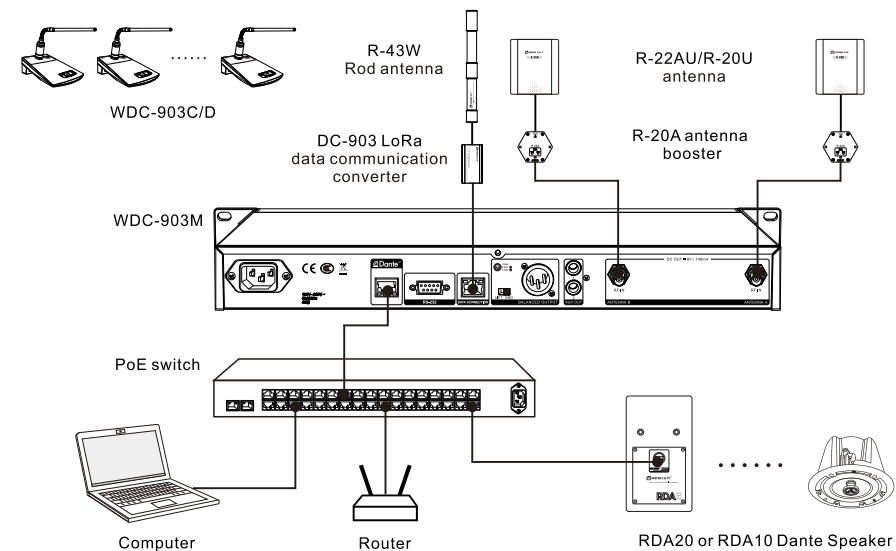


P28

14 System Application Connection Diagram

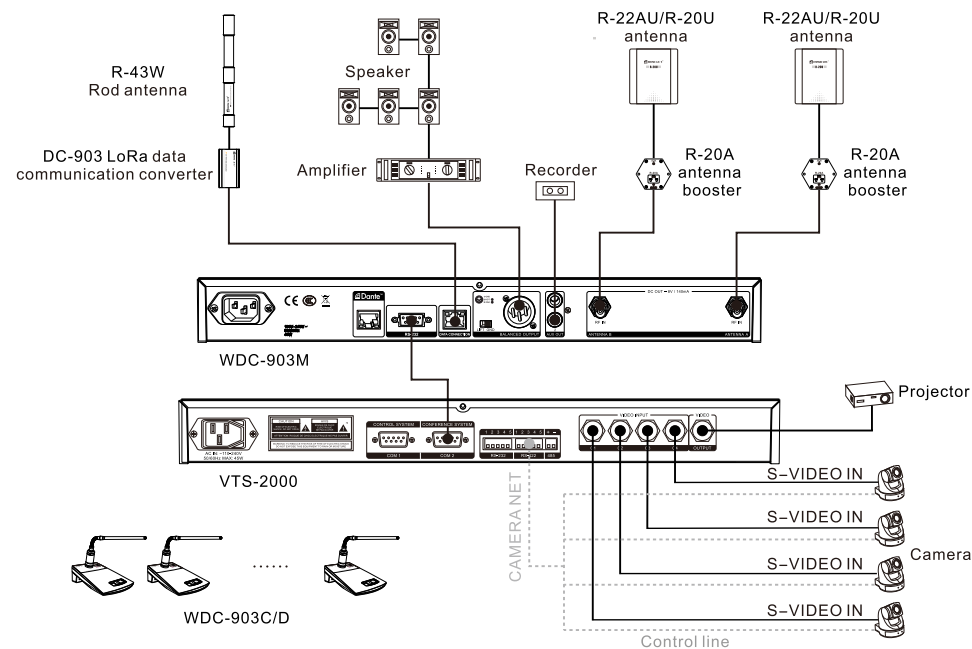

P27


08 Rear Panel Function Introduction

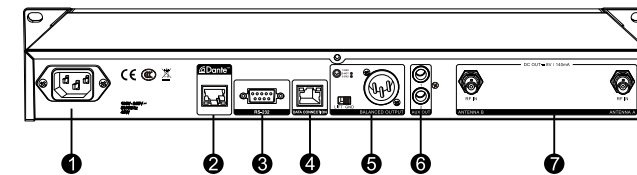

- 1 Power input socket: Standard IEC socket, can adapt to work at 100-240V 50/60Hz AC power.
- 2 Dante network port: Can connect Dante-supporting equipment.
- 3 RS-232 port: Can be connected to the automatic video tracking system VTS-2000 or other central control systems to achieve video tracking.
- 4 LoRa data communication port: Connect DC-903 data communication converter, and then connect to external transmitting and receiving antenna through DC-903.
- 5 Balanced audio output socket: XLR male socket can be connected to the audio input of the mixer and other equipment using standard two-core shielded cable.
- 6 RCA audio line output: Can be connected to mixers or recorders and other equipment.
- 7 BNC antenna port: Connect UHF antenna, can also connect R-20A antenna booster and R-20U / R-22AU external antenna to enhance the signal receiving distance.


P12

14 System Application Connection Diagram

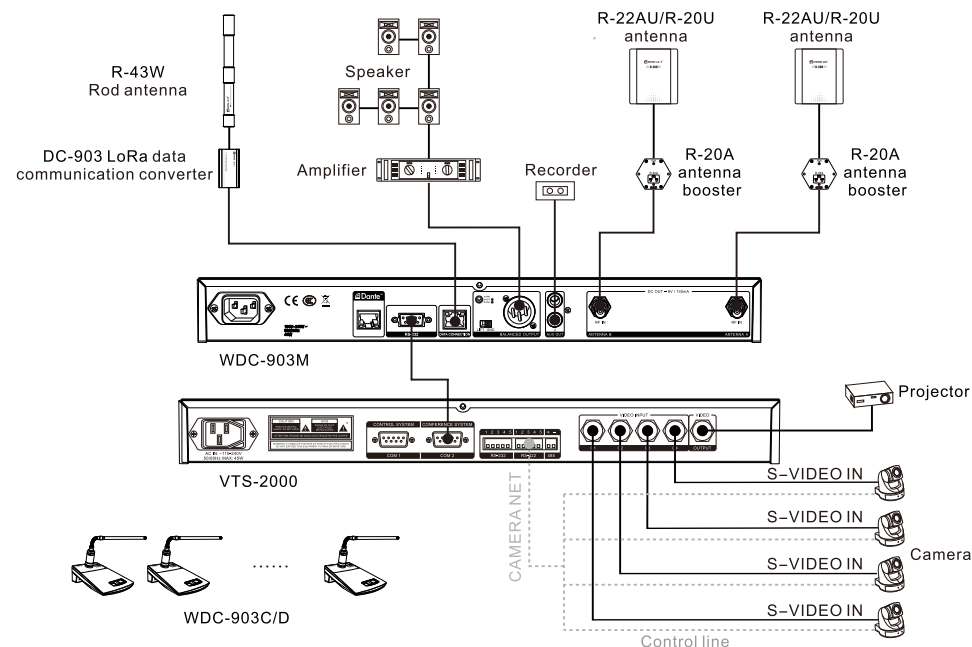

P27


08 Rear Panel Function Introduction

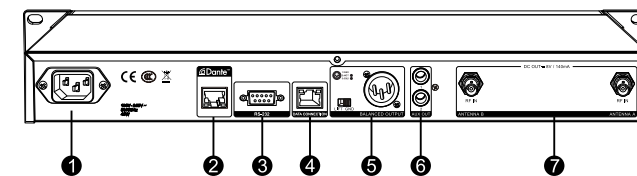

- 1 Power input socket: Standard IEC socket, can adapt to work at 100-240V 50/60Hz AC power.
- 2 Dante network port: Can connect Dante-supporting equipment.
- 3 RS-232 port: Can be connected to the automatic video tracking system VTS-2000 or other central control systems to achieve video tracking.
- 4 LoRa data communication port: Connect DC-903 data communication converter, and then connect to external transmitting and receiving antenna through DC-903.
- 5 Balanced audio output socket: XLR male socket can be connected to the audio input of the mixer and other equipment using standard two-core shielded cable.
- 6 RCA audio line output: Can be connected to mixers or recorders and other equipment.
- 7 BNC antenna port: Connect UHF antenna, can also connect R-20A antenna booster and R-20U / R-22AU external antenna to enhance the signal receiving distance.

P12

09 Microphone Unit Function Introduction

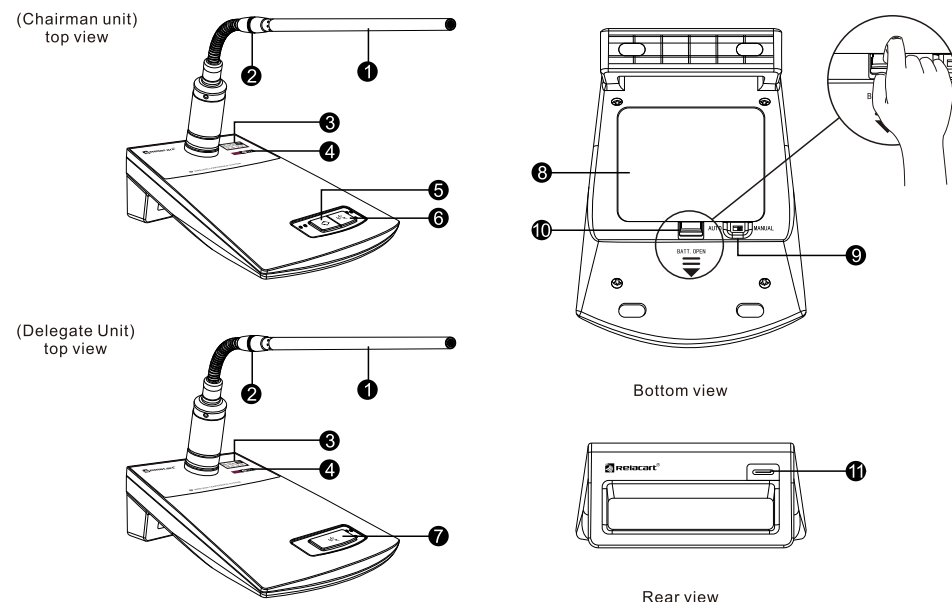


P13

- ⑥ Battery level display.
- ⑦ "OFF LINK" indicates that the microphone unit and the main controller key have not established communication.
- ⑧ "NO PAIRING" indicates that the microphone unit has not yet been ID-pairing with the main controller.
- ⑨ Microphone unit ID.
- ⑩ "FIFO" stands for FIFO mode.
- ⑪ Indicates that the microphone unit occupies the main controller's RF channel.
- ⑫ Indicates that the microphone is speaking.
- ⑬ "LIMIT" stands for time-limited speaking mode.
- ⑭ "REQUEST" means request to speak mode.
- ⑮ "VOICE" means voice activation mode.
- ⑯ "LEVEL" the volume of each conference unit can be adjusted individually through the remote control.
- ⑰ Indicates that the battery is charging.
- ⑱ The battery is fully charged.
- ⑲ When the delegate unit requests to speak, the interface displayed by the chairman unit will flash "REQUEST" and "003". The delegate unit ID of the application.
- ⑳ In the application mode, the chairman unit does not apply to speak through the delegate unit.
- ㉑ In the application mode, the chairman unit requests to speak through the delegate unit.
- ㉒ In the time limit mode, the time limit displayed when the delegate unit speaks.
- ㉓ Indicates that the speaking unit has exceeded the maximum number of speakers.

P26

09 Microphone Unit Function Introduction

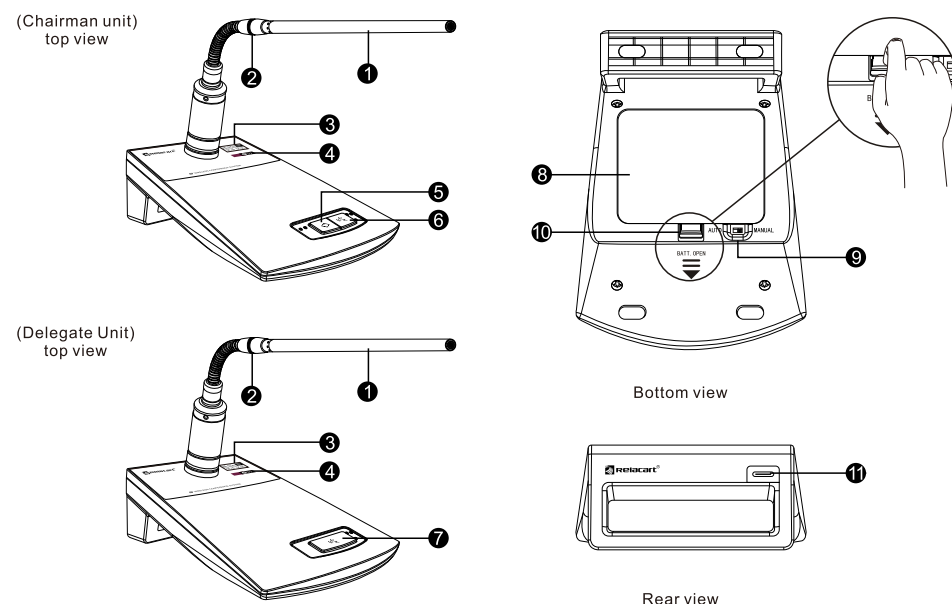


P13

- ⑥ Battery level display.
- ⑦ "OFF LINK" indicates that the microphone unit and the main controller key have not established communication.
- ⑧ "NO PAIRING" indicates that the microphone unit has not yet been ID-pairing with the main controller.
- ⑨ Microphone unit ID.
- ⑩ "FIFO" stands for FIFO mode.
- ⑪ Indicates that the microphone unit occupies the main controller's RF channel.
- ⑫ Indicates that the microphone is speaking.
- ⑬ "LIMIT" stands for time-limited speaking mode.
- ⑭ "REQUEST" means request to speak mode.
- ⑮ "VOICE" means voice activation mode.
- ⑯ "LEVEL" the volume of each conference unit can be adjusted individually through the remote control.
- ⑰ Indicates that the battery is charging.
- ⑱ The battery is fully charged.
- ⑲ When the delegate unit requests to speak, the interface displayed by the chairman unit will flash "REQUEST" and "003". The delegate unit ID of the application.
- ⑳ In the application mode, the chairman unit does not apply to speak through the delegate unit.
- ㉑ In the application mode, the chairman unit requests to speak through the delegate unit.
- ㉒ In the time limit mode, the time limit displayed when the delegate unit speaks.
- ㉓ Indicates that the speaking unit has exceeded the maximum number of speakers.

P26


13 Microphone Unit Display Overview

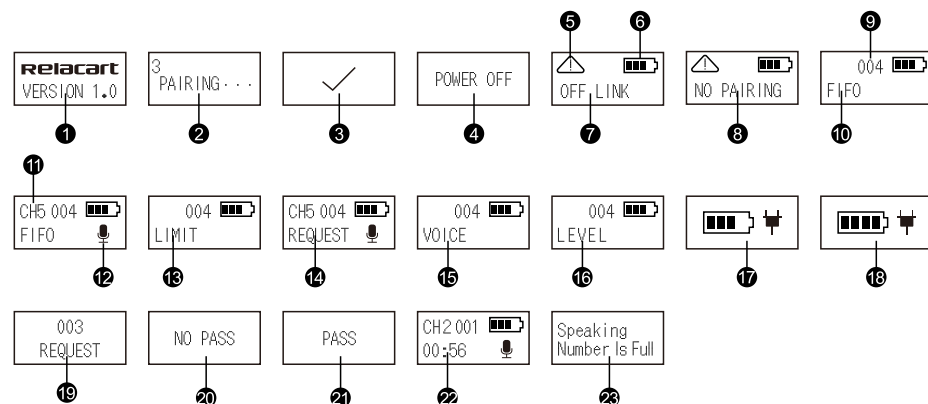

- 1 RELACART Logo and software version information.
- 2 ID pairing interface, indicating that the microphone unit is performing ID pairing operation with the main controller.
- 3 Display interface after ID pairing is successful.
- 4 Shutdown display interface.
- 5 Indicates that the microphone unit and the main controller key have not established communication or have malfunctioned.

- 1 Super cardioid directional: High-quality condenser microphone provides clear and full sound quality, high sensitivity, and good long-distance pickup effect.
 - 2 Working status indicator: The light is off when muted, the light is on when speaking, the light flashes when waiting for the application, and it will flash when the battery is dead.
 - 3 OLED display: Display the working status of the microphone, including conference mode, speaking status, battery indication, ID address, speaking channel light information.
 - 4 Infrared [iR] window: For adjusting the volume of a single conference unit, as shown in the frequency synchronization diagram of P16 (Figure 1).
 - 5 Chairman unit priority key: The chairman unit can turn off the delegate unit to speak or refuse to speak on behalf of a new delegate unit in application mode through the "priority speech key".
 - 6 Chairman unit speech button:
 - a. Long press for 1 second to turn on the conference unit, and long press for 3 seconds to turn off the conference unit.
 - b. Short press this button to enter speaking state (green) or mute state (red).
 - c. In the power-on state, press and hold for 3 seconds to enter the "ID pairing" state.
 - 7 Speech key of the delegate unit:
 - a. Press and hold for 1 second to turn on the conference unit, and press and hold for 3 seconds to turn off the conference unit.
 - b. Short press this button to enter speaking state (green) or mute state (red).
 - c. In the power-on state, press and hold for 3 seconds to enter the "ID pairing" state.
- (5 6 7) Buttons with braille logo: Braille text, which is convenient for people who have congenital defects or damage to the eyes to make them invisible.)

13 Microphone Unit Display Overview

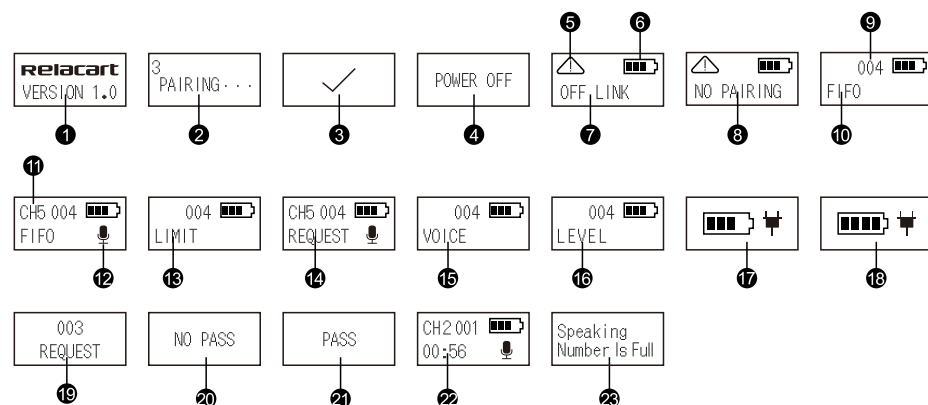

- 1 RELACART Logo and software version information.
- 2 ID pairing interface, indicating that the microphone unit is performing ID pairing operation with the main controller.
- 3 Display interface after ID pairing is successful.
- 4 Shutdown display interface.
- 5 Indicates that the microphone unit and the main controller key have not established communication or have malfunctioned.

- 1 Super cardioid directional: High-quality condenser microphone provides clear and full sound quality, high sensitivity, and good long-distance pickup effect.
 - 2 Working status indicator: The light is off when muted, the light is on when speaking, the light flashes when waiting for the application, and it will flash when the battery is dead.
 - 3 OLED display: Display the working status of the microphone, including conference mode, speaking status, battery indication, ID address, speaking channel light information.
 - 4 Infrared [iR] window: For adjusting the volume of a single conference unit, as shown in the frequency synchronization diagram of P16 (Figure 1).
 - 5 Chairman unit priority key: The chairman unit can turn off the delegate unit to speak or refuse to speak on behalf of a new delegate unit in application mode through the "priority speech key".
 - 6 Chairman unit speech button:
 - a. Long press for 1 second to turn on the conference unit, and long press for 3 seconds to turn off the conference unit.
 - b. Short press this button to enter speaking state (green) or mute state (red).
 - c. In the power-on state, press and hold for 3 seconds to enter the "ID pairing" state.
 - 7 Speech key of the delegate unit:
 - a. Press and hold for 1 second to turn on the conference unit, and press and hold for 3 seconds to turn off the conference unit.
 - b. Short press this button to enter speaking state (green) or mute state (red).
 - c. In the power-on state, press and hold for 3 seconds to enter the "ID pairing" state.
- (5 6 7) Buttons with braille logo: Braille text, which is convenient for people who have congenital defects or damage to the eyes to make them invisible.)

⑧ Removable lithium battery box: It provides power for the microphone unit, rated capacity 2900mAh, rated voltage: 3.7V.

⑨ Manual/Automatic switch:

- When the switch is turned to "AUTO", the microphone unit is switched to the automatic power-on mode. When the microphone unit is turned off, as long as it receives the power-on signal from the main controller, the microphone unit will automatically power on.
- When the switch is turned to "MANUAL", the microphone unit is switched to the manual power-on mode. The microphone unit cannot receive the power-on signal transmitted by the main controller, and the microphone unit needs to be turned on manually.

Note: In the case of shutting down and removing the battery box, when you switch the switch from "MANUAL" to "AUTO", you need to manually turn on the microphone unit once and then turn it off before the microphone unit can start the automatic power-on mode.

⑩ Battery compartment sliding switch.

(Note: Toggle the battery compartment switch in the direction of the arrow indicated by the battery to install or remove the battery.)

⑪ TYPE-C charging port: It can charge the lithium battery of the microphone unit, the charging rated voltage is 5V, and the charging rated current is 800mA.

1) The conference setup includes three menu items: "Meeting Set", "Speaker Number" Setting, and "ID Pairing". For specific function operations, please refer to the description above.

2) System setup include nine menu items: "SQ" setting, "Volume" setting, "Close VLI units", "Shutdown Reset", "Address Reset", "Language" setting, "Set Default", "Key Lock", "LoRa Channel Set".

a. SQ: 0dB to 35dB can be selected according to the application and environment.

b. "Volume" setting: Please refer to the operation instructions of the panel shortcut key "VOLUME".

c. "Close VLI units": All microphone units are turned off.

d. "Shutdown Reset": "AClose All Units" means that the microphone unit will be turned off when the main controller is turned off. "Don't Close Units" means that the microphone unit will not be turned off when the main controller is turned off.

e. "Address Reset": Reset the IP address. All microphone units need to be "IP pairing" to obtain the address before they can be used.

f. "Language" setting: English and Simplified Chinese for optional.

g. "Set Default": The main controller is restored to the factory settings.

h. "Key Lock": The main controller's keys are locked, and the function menu cannot be selected. The lock icon on the main controller's main interface is closed . Selecting the function menu indicates "Key Lock".

i. "LoRa Channel Set": There are 8 channels to choose. When using more than 2 sets of WDC-903 wireless conference systems on the same occasion, the LoRa channels must be staggered, otherwise crosstalk will occur between the systems.

j. Turn on microphone unit settings: Manual/Automatic switching.

a. Automatic: When the host is turned on, the host automatically matches the conference base and starts the conference base automatically.

b. Manual: When the host is turned on, the host automatically matches the conference base, but does not start the conference base. It needs to be turned on manually.

Note: 1. This function requires that the conference base is already matched with the host.

2. When setting the automatic function, the conference base must be set to automatic open to take effect.

3) System Information: Includes "System", "Frequency" two menu items.

System: You can view the system software version information.

Frequency: You can view the operating frequency range of this machine.

⑧ Removable lithium battery box: It provides power for the microphone unit, rated capacity 2900mAh, rated voltage: 3.7V.

⑨ Manual/Automatic switch:

- When the switch is turned to "AUTO", the microphone unit is switched to the automatic power-on mode. When the microphone unit is turned off, as long as it receives the power-on signal from the main controller, the microphone unit will automatically power on.
- When the switch is turned to "MANUAL", the microphone unit is switched to the manual power-on mode. The microphone unit cannot receive the power-on signal transmitted by the main controller, and the microphone unit needs to be turned on manually.

Note: In the case of shutting down and removing the battery box, when you switch the switch from "MANUAL" to "AUTO", you need to manually turn on the microphone unit once and then turn it off before the microphone unit can start the automatic power-on mode.

⑩ Battery compartment sliding switch.

(Note: Toggle the battery compartment switch in the direction of the arrow indicated by the battery to install or remove the battery.)

⑪ TYPE-C charging port: It can charge the lithium battery of the microphone unit, the charging rated voltage is 5V, and the charging rated current is 800mA.

1) The conference setup includes three menu items: "Meeting Set", "Speaker Number" Setting, and "ID Pairing". For specific function operations, please refer to the description above.

2) System setup include nine menu items: "SQ" setting, "Volume" setting, "Close VLI units", "Shutdown Reset", "Address Reset", "Language" setting, "Set Default", "Key Lock", "LoRa Channel Set".

a. SQ: 0dB to 35dB can be selected according to the application and environment.

b. "Volume" setting: Please refer to the operation instructions of the panel shortcut key "VOLUME".

c. "Close VLI units": All microphone units are turned off.

d. "Shutdown Reset": "AClose All Units" means that the microphone unit will be turned off when the main controller is turned off. "Don't Close Units" means that the microphone unit will not be turned off when the main controller is turned off.

e. "Address Reset": Reset the IP address. All microphone units need to be "IP pairing" to obtain the address before they can be used.

f. "Language" setting: English and Simplified Chinese for optional.

g. "Set Default": The main controller is restored to the factory settings.

h. "Key Lock": The main controller's keys are locked, and the function menu cannot be selected. The lock icon on the main controller's main interface is closed . Selecting the function menu indicates "Key Lock".

i. "LoRa Channel Set": There are 8 channels to choose. When using more than 2 sets of WDC-903 wireless conference systems on the same occasion, the LoRa channels must be staggered, otherwise crosstalk will occur between the systems.

j. Turn on microphone unit settings: Manual/Automatic switching.

a. Automatic: When the host is turned on, the host automatically matches the conference base and starts the conference base automatically.

b. Manual: When the host is turned on, the host automatically matches the conference base, but does not start the conference base. It needs to be turned on manually.

Note: 1. This function requires that the conference base is already matched with the host.

2. When setting the automatic function, the conference base must be set to automatic open to take effect.

3) System Information: Includes "System", "Frequency" two menu items.


System: You can view the system software version information.

Frequency: You can view the operating frequency range of this machine.


10 Remote Control




- ④ Press and hold the coding knob for 3 seconds to enter the menu selection interface. The menu structure is shown below:

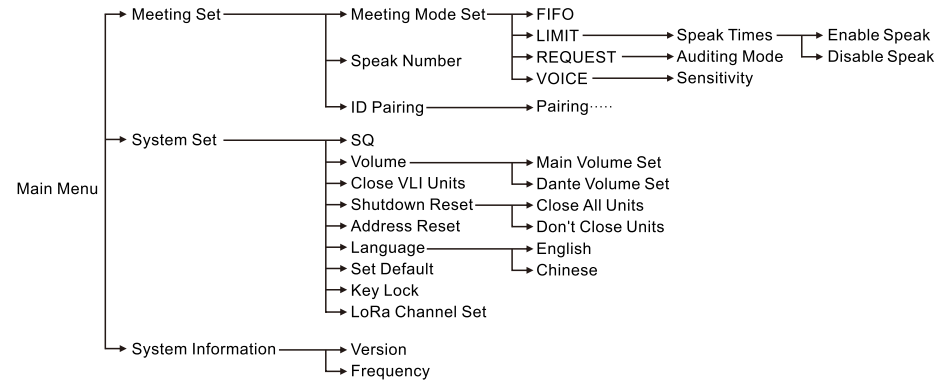

Use the remote control to set and adjust the microphone volume

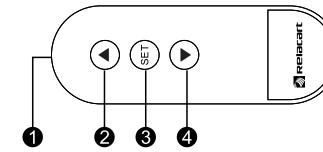

- ① Infrared frequency window.
- ② “▲” Button: Gain volume (3-12dB adjustable).
- ③ “SET” Setting button: Enter the volume setting or confirm.
- ④ “▼” Button: Attenuation volume (3-12dB adjustable).

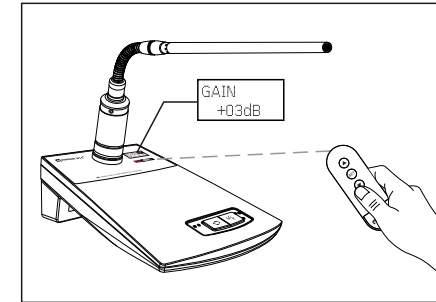

(Figure 1)


As shown in the picture on the left, aim the remote control at the binding window of the conference unit, press the “SET” button on the remote control to enter the volume setting, and use the “▲” “▼” buttons to set the volume gain or attenuation of the conference unit, achieving consistent volume for each conference unit.

Note: 1. The control distance between the remote control and the conference unit is within 3 meters.
2. After entering the volume setting, it will automatically exit in 3 seconds.
3. When setting the volume, do not put multiple conference units together.


10 Remote Control




- ④ Press and hold the coding knob for 3 seconds to enter the menu selection interface. The menu structure is shown below:

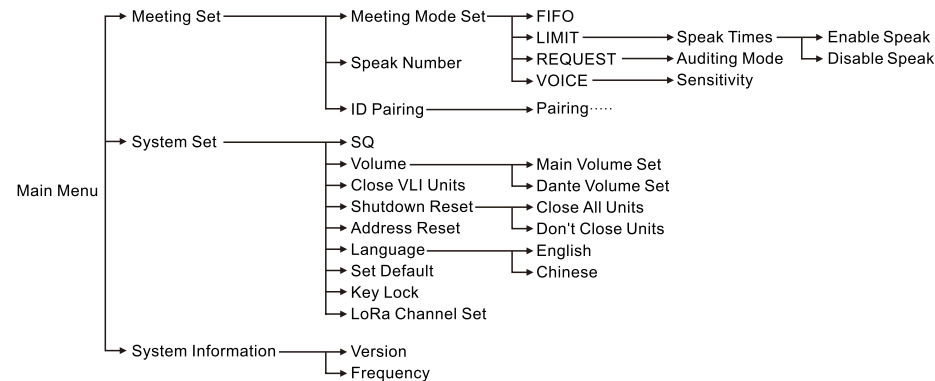

Use the remote control to set and adjust the microphone volume

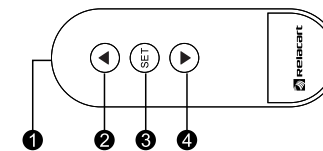

- ① Infrared frequency window.
- ② “▲” Button: Gain volume (3-12dB adjustable).
- ③ “SET” Setting button: Enter the volume setting or confirm.
- ④ “▼” Button: Attenuation volume (3-12dB adjustable).

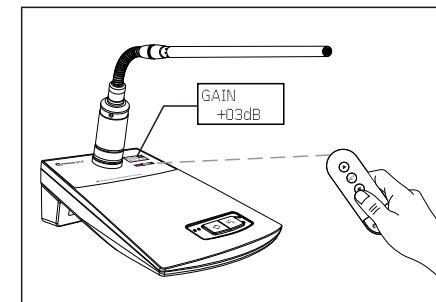


(Figure 1)

As shown in the picture on the left, aim the remote control at the binding window of the conference unit, press the “SET” button on the remote control to enter the volume setting, and use the “▲” “▼” buttons to set the volume gain or attenuation of the conference unit, achieving consistent volume for each conference unit.

Note: 1. The control distance between the remote control and the conference unit is within 3 meters.
2. After entering the volume setting, it will automatically exit in 3 seconds.
3. When setting the volume, do not put multiple conference units together.


11 LoRa Data Communication Converter Function Introduction

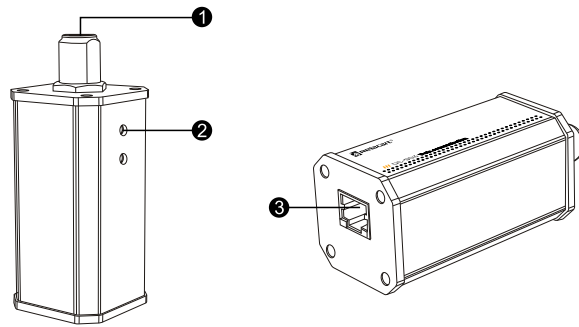

- ❶ Antenna input port: N-type female connector, which can be connected to 400-450MHz LoRa antenna.
- ❷ Screw port: Screw port for wall mount.
- ❸ Data communication connection port: RJ45 interface, connected by DC-903 to DATA CONNECTION end of WDC-903M.

P17

 VOICE: When the sound pressure picked up by the microphone unit is greater than the preset threshold, the speech will be automatically turned on. The sound pressure threshold can be set by the "Sensitivity" setting. When set the "Sensitivity" higher, and the lower of sound pressure threshold, it can easier turn on the microphone. Only one delegate unit can speak the under voice activation mode, when the maximum number of speakers is reached, subsequent microphone speaks.



Main controller



Microphone unit


- ❷ Press the ACTIVE MICRO'S button on the main controller panel to enter the number of speaking unit setting interface. Turn the encoder knob to select the number of microphone units that can speak at the same time. There are 1.2.3.4.5 number options respectively.



- ❸ Press the VOLUME button on the main controller panel to enter the volume setting interface. You can set the volume by selecting the "Main Volume Set" and "Dante Volume Set" by turning the encoder knob.
 - Main Volume Set: Control the master volume output of the main controller.
 - Dante Volume Set: Control the volume of Dante device input to the main controller.

P22


11 LoRa Data Communication Converter Function Introduction

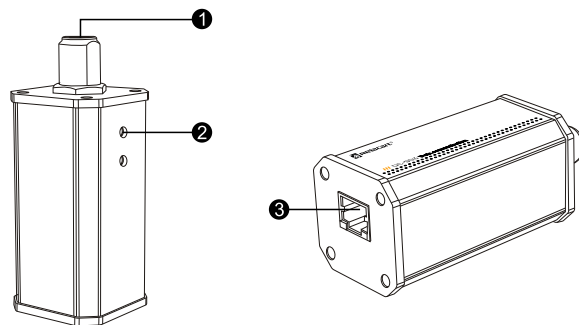

- ❶ Antenna input port: N-type female connector, which can be connected to 400-450MHz LoRa antenna.
- ❷ Screw port: Screw port for wall mount.
- ❸ Data communication connection port: RJ45 interface, connected by DC-903 to DATA CONNECTION end of WDC-903M.

P17

 VOICE: When the sound pressure picked up by the microphone unit is greater than the preset threshold, the speech will be automatically turned on. The sound pressure threshold can be set by the "Sensitivity" setting. When set the "Sensitivity" higher, and the lower of sound pressure threshold, it can easier turn on the microphone. Only one delegate unit can speak the under voice activation mode, when the maximum number of speakers is reached, subsequent microphone speaks.



Main controller



Microphone unit

- ❷ Press the ACTIVE MICRO'S button on the main controller panel to enter the number of speaking unit setting interface. Turn the encoder knob to select the number of microphone units that can speak at the same time. There are 1.2.3.4.5 number options respectively.



- ❸ Press the VOLUME button on the main controller panel to enter the volume setting interface. You can set the volume by selecting the "Main Volume Set" and "Dante Volume Set" by turning the encoder knob.
 - Main Volume Set: Control the master volume output of the main controller.
 - Dante Volume Set: Control the volume of Dante device input to the main controller.

 
P22

12 Setup and Operation

REQUEST: The operation of delegate unit should be approved by chairman unit.

- Chairman's microphone unit approval:
When applying for the speaking mode, the chairman unit has been speaking for a long time. When a delegate unit requests to speak, press the "⚡" speak button to allow the delegate unit, and press the "◇" priority button to reject the delegate unit.
- Main controller default approval:
"Enable speak" means that the main controller passes by default when the chairman unit has not approved.
"Disable speak" means that the main controller does not pass the delegate unit by default when the chairman unit has not approved.

"REQUEST" shown on the display when the delegate unit requests to speak. The microphone indicator light will flash, and the chairman unit display will show the ID code of the delegate unit and "REQUEST" flashing. At this time, the chairman unit can approve or reject to speak. After the delegate unit speaks 20 seconds, if the chairman unit does not approve it, the main controller will approve it by default. When the number of microphone speeches has reached the preset number of turns on (1/2/3/4/5), the delegate unit request to speak later is in a waiting state (the main controller displays the number of microphone speeches and the number of waiting speeches). When the delegate unit is passed, it will turn off the first one to maintain the total number of open speech units.



Main controller

 


Microphone unit

Before the meeting starts, make the corresponding setup for the main controller according to the needs of the meeting, and use the shortcut keys and function coding knobs on the front panel of the main controller to set.

A. Startup main interface

After turn on the power switch, the WDC-903M main controller starts searching for online microphone units for 75 seconds. After the search is completed, the number of online microphone units is displayed.



B. Pair the microphone unit with the main controller

The microphone unit needs to be paired with the main controller before data communication. The unpaired microphone will display the "NO PAIRING" interface after it is powered on. The microphone can only work normally after it is paired with the main controller. The pairing operation is as follows:

- Press and hold the coding knob on the main controller panel for 3 seconds to enter the operation interface, select "Meeting Set" - "ID pairing", the main controller display shows "Pairing.....".

 


12 Setup and Operation

REQUEST: The operation of delegate unit should be approved by chairman unit.

- Chairman's microphone unit approval:
When applying for the speaking mode, the chairman unit has been speaking for a long time. When a delegate unit requests to speak, press the "⚡" speak button to allow the delegate unit, and press the "◇" priority button to reject the delegate unit.
- Main controller default approval:
"Enable speak" means that the main controller passes by default when the chairman unit has not approved.
"Disable speak" means that the main controller does not pass the delegate unit by default when the chairman unit has not approved.

"REQUEST" shown on the display when the delegate unit requests to speak. The microphone indicator light will flash, and the chairman unit display will show the ID code of the delegate unit and "REQUEST" flashing. At this time, the chairman unit can approve or reject to speak. After the delegate unit speaks 20 seconds, if the chairman unit does not approve it, the main controller will approve it by default. When the number of microphone speeches has reached the preset number of turns on (1/2/3/4/5), the delegate unit request to speak later is in a waiting state (the main controller displays the number of microphone speeches and the number of waiting speeches). When the delegate unit is passed, it will turn off the first one to maintain the total number of open speech units.



Main controller



Microphone unit

Before the meeting starts, make the corresponding setup for the main controller according to the needs of the meeting, and use the shortcut keys and function coding knobs on the front panel of the main controller to set.

A. Startup main interface

After turn on the power switch, the WDC-903M main controller starts searching for online microphone units for 75 seconds. After the search is completed, the number of online microphone units is displayed.



 
B. Pair the microphone unit with the main controller

The microphone unit needs to be paired with the main controller before data communication. The unpaired microphone will display the "NO PAIRING" interface after it is powered on. The microphone can only work normally after it is paired with the main controller. The pairing operation is as follows:

- Press and hold the coding knob on the main controller panel for 3 seconds to enter the operation interface, select "Meeting Set" - "ID pairing", the main controller display shows "Pairing.....".



- ② In the microphone off state, press and hold the speaking button of the microphone for 3 seconds until the display shows the "PAIRING....." interface. Then you can release the buttons. At this time, the main controller and the microphone will establish a pairing relationship. After the pairing is completed, the microphone displays a "✓" interface and automatically turns off the microphone.




- ③ After all the microphone units have been paired, the main controller exits the "Pairing....." and returns to the main interface. Then, when the microphone is turned on, the microphone can work normally.

C. Main controller setup

- ① Press the MODE button on the main controller to enter the conference mode setup. Rotate the coding knob to select one of the four speaking modes: "FIFO", "LIMIT", "REQUEST", and "VOICE activation".



 FIFO: Can active (1/2/3/4/5) microphone units in a time. When speaking microphone over the limit number of speakers who spoke first will be override. (The chairman unit is not limited) to keep the total number of open speaking units.



Main controller

 


Microphone unit

LIMIT: Allow maximum 5 speaking units, and can set the microphone to open 1min to 100 min, when the limited time is reach, subsequent microphone speaks (The chairman unit is not limited). When the number of microphone speech units that have been turned on has reached the preset number (1/2/3/4/5), the delegate microphone units that apply for speech later are in the waiting state (The "LIMIT" displayed on the display of the microphone unit and the microphone indicator will flash, and the host will display the number of microphone speeches and the number of speeches waiting). After the microphone unit that has been opened for speech is closed, the representative unit waiting for speech will automatically start to speak to maintain the total number of open speech units.




Main controller



Microphone unit

 - ② In the microphone off state, press and hold the speaking button of the microphone for 3 seconds until the display shows the "PAIRING....." interface. Then you can release the buttons. At this time, the main controller and the microphone will establish a pairing relationship. After the pairing is completed, the microphone displays a "✓" interface and automatically turns off the microphone.




- ③ After all the microphone units have been paired, the main controller exits the "Pairing....." and returns to the main interface. Then, when the microphone is turned on, the microphone can work normally.

C. Main controller setup

- ① Press the MODE button on the main controller to enter the conference mode setup. Rotate the coding knob to select one of the four speaking modes: "FIFO", "LIMIT", "REQUEST", and "VOICE activation".



 FIFO: Can active (1/2/3/4/5) microphone units in a time. When speaking microphone over the limit number of speakers who spoke first will be override. (The chairman unit is not limited) to keep the total number of open speaking units.



Main controller

 


Microphone unit

LIMIT: Allow maximum 5 speaking units, and can set the microphone to open 1min to 100 min, when the limited time is reach, subsequent microphone speaks (The chairman unit is not limited). When the number of microphone speech units that have been turned on has reached the preset number (1/2/3/4/5), the delegate microphone units that apply for speech later are in the waiting state (The "LIMIT" displayed on the display of the microphone unit and the microphone indicator will flash, and the host will display the number of microphone speeches and the number of speeches waiting). After the microphone unit that has been opened for speech is closed, the representative unit waiting for speech will automatically start to speak to maintain the total number of open speech units.



Main controller



Microphone unit